


BROCK®


FEED VIEW WINDOW (CORRUGATED) 3-14254

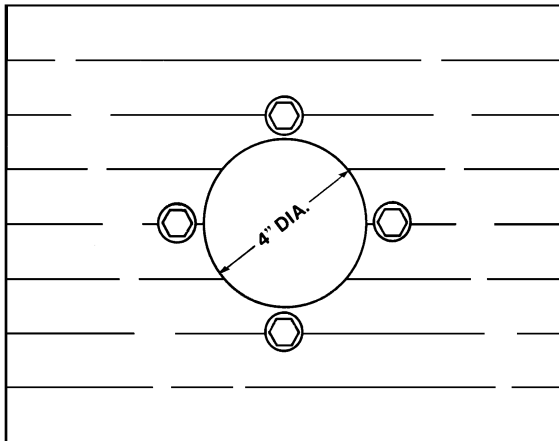

D:\INSTR\FEDVIEWA.PCX

Outside View

Use Washer (3-14185)
to mark the hole locations in
the corrugated Body Sheets.

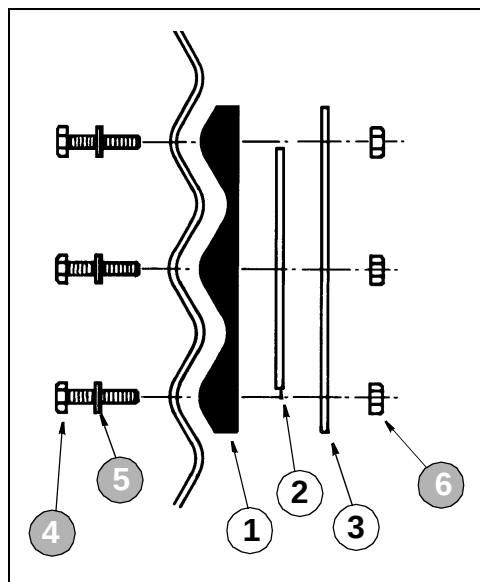


D:\INSTR\FEDVIEWB.PCX

Side View

Key	Part No.	Description	Qty.
1	3-14186	Corrugated Rubber Gasket	1
2	3-13643	5" (127mm) Diameter Window	1
3	3-14185	12 Ga. 4 1/16" I.D., 3/4" O.D. Washer	1
4	39-20243	5/16 x 1 1/2" Half Thread Gr. 2 Bolt	4
5	39-20155	5/16" Fabco Washer	4
6	39-20020	5/16" Hex Nut	4

BROCK®


FEED VIEW WINDOW (CORRUGATED) 3-14254

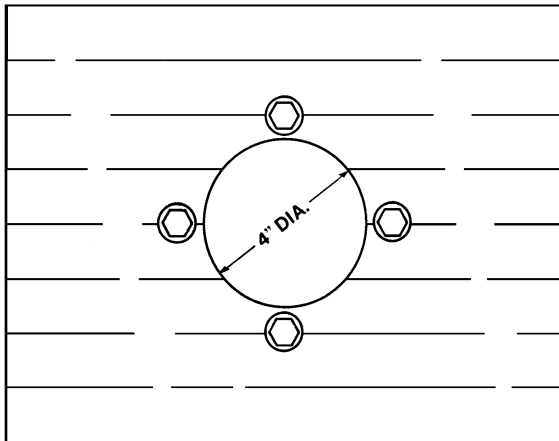

D:\INSTR\FEDVIEWA.PCX

Outside View

Use Washer (3-14185)
to mark the hole locations in
the corrugated Body Sheets.

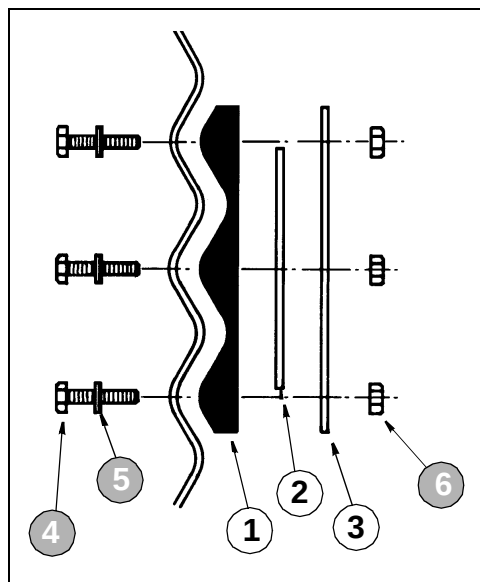

D:\INSTR\FEDVIEWB.PCX

Side View

Key	Part No.	Description	Qty.
1	3-14186	Corrugated Rubber Gasket	1
2	3-13643	5" (127mm) Diameter Window	1
3	3-14185	12 Ga. 4 1/16" I.D., 3/4" O.D. Washer	1
4	39-20243	5/16 x 1 1/2" Half Thread Gr. 2 Bolt	4
5	39-20155	5/16" Fabco Washer	4
6	39-20020	5/16" Hex Nut	4